

Thank you for your purchasing our scale. Please read all operation instructions carefully before use

CLUE TO INFORMATION

- LO: Low battery, please change the battery
- OuEr: You are overloading the scale, remove the excessive load immediately
- UnSt: Your scale is placed an unstable surface, please remove it to a stable, vibration less surface
- OutZ: Your scale can not return to zero, please recalibrate it
- CAL: Enter calibration mode, you can make calibration by pressing CAL, or turn off it by pressing "ON/OFF"
- PASS: You have calibrated the scale successfully, please reset it.

CHANGE UNIT

At open, need the transformation unit, press "MODE" key, each press once transformation an unit

CALIBRATION

When close, press "CAL" key, at the same time press "ON/OFF" key to open the scale until display "CAL" signs, loosening to open the "CAL" key:

Press a "CAL" key again, the "CAL" sign starts gleaming, please keeping of stability of scale, when wait twinkling sign change into the "500.0", put 500g weight standards, continue keeping stability of the scale, wait display "PASS", correct the success, then close. If manifesting "FAIL" sign mean the failure, repeat above step.

PLEASE CHECK AVAILABILITY OF WITH THE STORE YOU BOUGHT THE SCALE FROM AND USE HIGH QUALITY AAA BATTERY.

- FAIL: Calibration fail, something affects our calibration, please remove your scale to a stable environment and recalibrate it.

SPECIFICATIONS

Units: g/oz/gn/dwt, opening the default unit as the usage unit to shut down

Auto off: 60 seconds off

Temperature: 10-30°C

OPERATION ENVIRONMENT

Please place your scale at suitable temperature and please give the scale one hour to stabilize before use in a new environment gently applies all items to be weighed onto trap top. Try to avoid rough treatment as this permanently damage the internal sensor. Avoid shaking, dropping or other wise shocking the scale.

ADDITIONAL FUNCTION

●PCS FUNCTION

In the ON state, please select some pieces of weighing items according to the weight of single item and put them on the platform for counting (note: the selected items quantity should be 10, 20, 50 or 100pcs). After the LCD displays weights, please press "PCS" and hold it until LCD displays "10" in default state, if you put 10 or 20pcs items on platform, please change the displays to 10 or 20 by pressing "MODE" key, then press "PCS" key again to confirm your setting number is correct with the items quantity you putted. Remove the items, then LCD displays "0" "p" and enter counting function.

Your counting setting will be kept in the scale, if you want another counting operation, please press "PCS" key in ON state, after LCD displays "0" "p", and your scale will enter

OPERATION

Place Scale on a horizontal flat surface, press "ON/OFF" switch, and wait until "0.0" and zero-stable-sign "0" are displayed and put the object on the weighing platform. When display weight locked sign "⏸" it can read.

TARE WEIGHING

Turn on scale as described above, place the "tare item" on the platform, Press "TARE" and wait until "0.0" is displayed, then add the "net-weight-item", Press "TARE" again, will cancel TARE FUNCTION

RETURN TO ZERO

After weighing, if occurrence the manifestation is not a "0.0", can press "ZERO" key, make manifestation for "0.0", proceed to weigh again

counting function state again.

If you want to cancel the counting function please press "CAL" key and enter weighing mode.