

DIGITAL SCALE

User's Manual

Thank you for using our pocket scales.

With normal care and proper treatment it will provide years of reliable service.

Please read all the operating instructions carefully before use. Thank you!

SIGNAL INSTRUCTIONS

● LO: Low battery, please change for

another one soon

● OuEr: The pocket scale is being over-loaded,

please remove the excessive weight immediately.

● UnSt: The pocket scale is placed on an

unstable surface, please move it to a stable surface.

● OutZ: The pocket scale can not return to

zero, please recalibrate it.

● CAL: Enter calibration mode, you can make

Calibration by pressing "CAL", or turn it off by

Pressing "ON/OFF"

● PASS: You have successfully calibrated the

scales, please reset it.

● FAIL: Please remove your scale to a stable

place and recalibrate it.

OPERATING INSTRUCTIONS

ON/OFF FUNCTION

Place your scale on a flat and stable surface,

press "ON/OFF" key, wait until "0.0" and

zero-stable-sign "O" displayed, then put the

object you want to weigh on the platform.

When showing locked sign "⊞", it can be read.

TARE FUNCTION

Turn on the scale as described above,

place the "tare item" on the platform, press

"TARE" and wait until "0.0" displayed,

then add the "net-weight-item". Press "TARE"

again will cancel TARE FUNCTION

RETURN TO ZERO

After weighing, if the displaying showed not

the "0.0", then press "ZERO/TARE" key to

return to "0.0", proceed to weigh again.

CHANGE WEIGHING MODES

Press "CAL/MODE" key to change weighing

modes. We have 4 units: g, oz, gn, dwt.

CALIBRATION

Turn off the scale. Press "CAL/MODE" key,

press "ON/ OFF" with another finger, once

turned it on, then loosen it. Do not loosen

"CAL/MODE" key until it showed "CAL" then

press "CAL/MODE" key again, then the "CAL"

will start to gleam, please keep stability of the

scale, and wait the twinkling sign change

into "100.0", put the 100g weight Standards,

on the platform continue keeping stability of

the scale, wait display "PASS". Calibration is

complete.

OPERATING ENVIRONMENT

The optimum temperature for the scales is

10-30°C. Try to avoid rough handling as it will

damage the internal sensor. Also avoid

shaking, dropping etc

AUTO-OFF

The scales will automatically shut off after

30 seconds of inactivity for conserving

battery power.

PLEASE USE HIGH QUALITY AAA BATTERY.