

## PM DIGITAL SCALES

This scale has been calibrated before sending, nevertheless, its precision can be affected by gravity variations, manipulation and temperature changes.

Avoid shaking, dropping or any exposure to extreme heat or cold. This is a precision instrument and must be handled with extreme care.

Never load the scale with more than the maximal capacity.

### 1. OPERATION:

- Place the scale on a horizontal flat surface
- Press ON/OFF key to turn it on
- Wait until [0.0] is displayed
- Put the object on the weighing platform
- Using the MODE key, you can switch between the weighing units

### 2. TARE FUNCTION

- Turn it on as described above
- Place the tare item on the platform
- Press **[T]** TARE and wait until [0.0] is displayed
- And the “net-weight-item”

### 3. CALIBRATION

#### **STANDARD:**

- Turn off the scale
- Press ON/OFF shortly. Then immediately press and hold **[C]** until (CAL) will be displayed.
- Release the [C] key.
- Press [C] again. Now the display reads [C] followed by the weight required for the calibration
- Place the weight on the centre of the platform. Wait 3-4 seconds. The LCD reads [PASS] and the weight.
- Remove the weight and press ON/OFF to turn off the scale